


V-6

PERSONAL PULLEY GYM

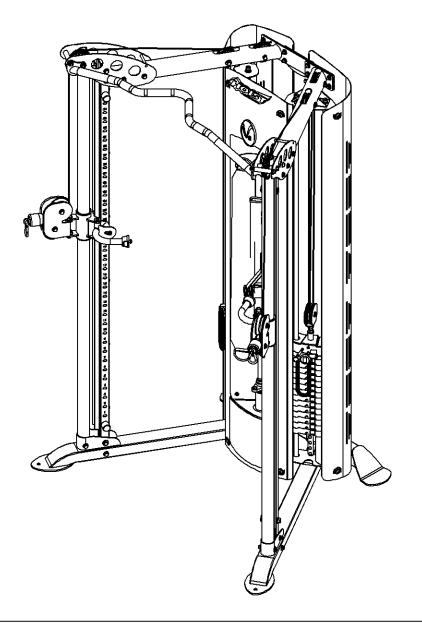

Note: Both Serial Number and Model Number are Required when Ordering Parts

RECORD SERIAL NUMBER HERE

CATALOG NUMBER

1007 - 004

Customer Service

(800) 548-5438

(858) 578-7676

<u>Fax</u>

(858) 578-9558

CONTENTS

INSTRUCTIONS 02
FRAME ASSEMBLY 04
ACCESSORIES/MISC 32
PRE-ASSEMBLY 33
DECAL PLACEMENT
DECAL REFERENCE 36
PART LIST 39
ABBREVIATIONS 42
BOLT SIZING CHART 43
WASHER SIZING CHART 45
MAINTENANCE SCHEDULE 47
GENERAL MAINTENANCE INFORMATION 48
WEIGHT TRAINING TIPS 49
EXERCISE LOG 51
LIMITED WARRANTY 52

INSTRUCTIONS

Before beginning assembly please take the time to read instructions thoroughly. Please use the various lists in this manual to make sure that all parts have been included in your shipment. When ordering, use part number and description from the lists. Use only HOIST replacement parts when servicing. Failure to do so will void your warranty and could result in personal injury.

HOIST equipment is designed to provide the smoothest, most effective exercise motion possible. After assembly, you should check all functions to ensure correct operation. If you experience problems, first recheck the assembly instructions to locate any possible errors made during assembly. If you are unable to correct the problem, call your authorized HOIST dealer. Be sure to have your serial number and this manual when calling. When all parts have been accounted for, continue on.

TOOLS REQUIRED

Ratchet Wrench

1/2", 9/16" and 3/4" Sockets

Adjustable Wrench

Rubber Mallet

Tape Measure

Level


Hex Key Wrench Set


2 People Required For Assembly

Needle Nose Pliers


THIS PAGE WAS INTENTIONALLY LEFT BLANK


PAGE 03 V-6 ASSEMBLY

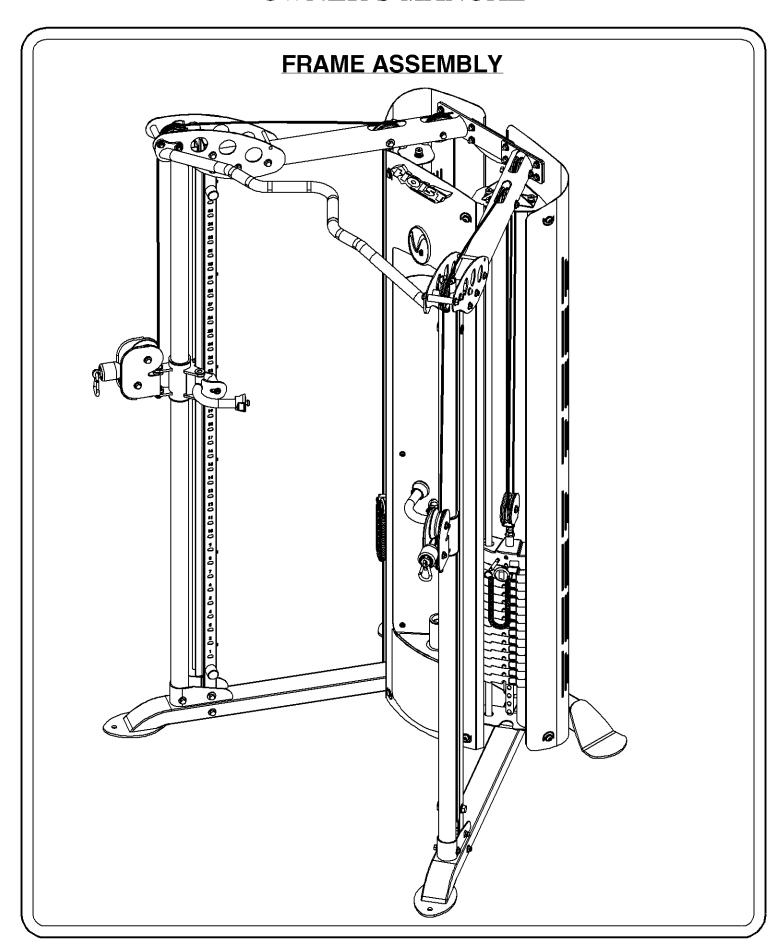

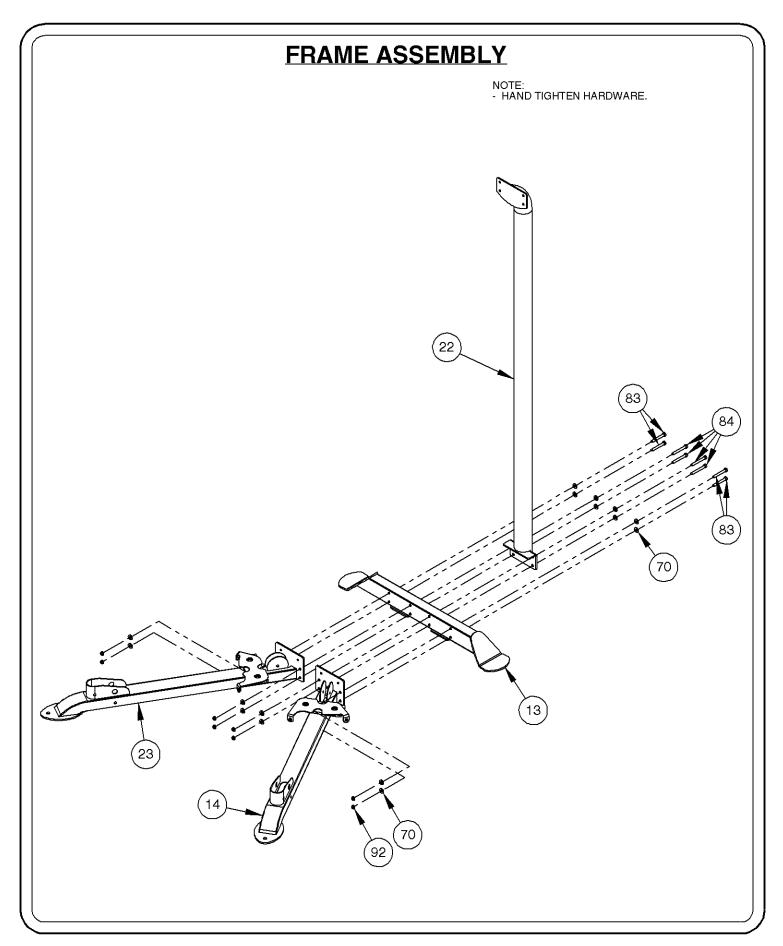



PAGE 05 V-6 ASSEMBLY

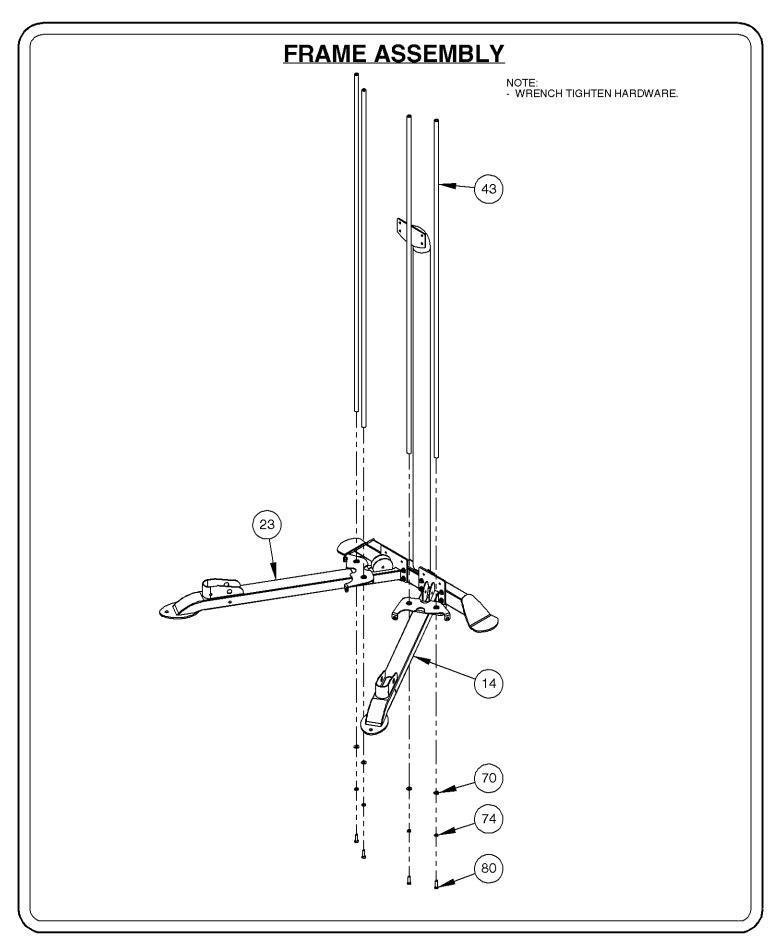

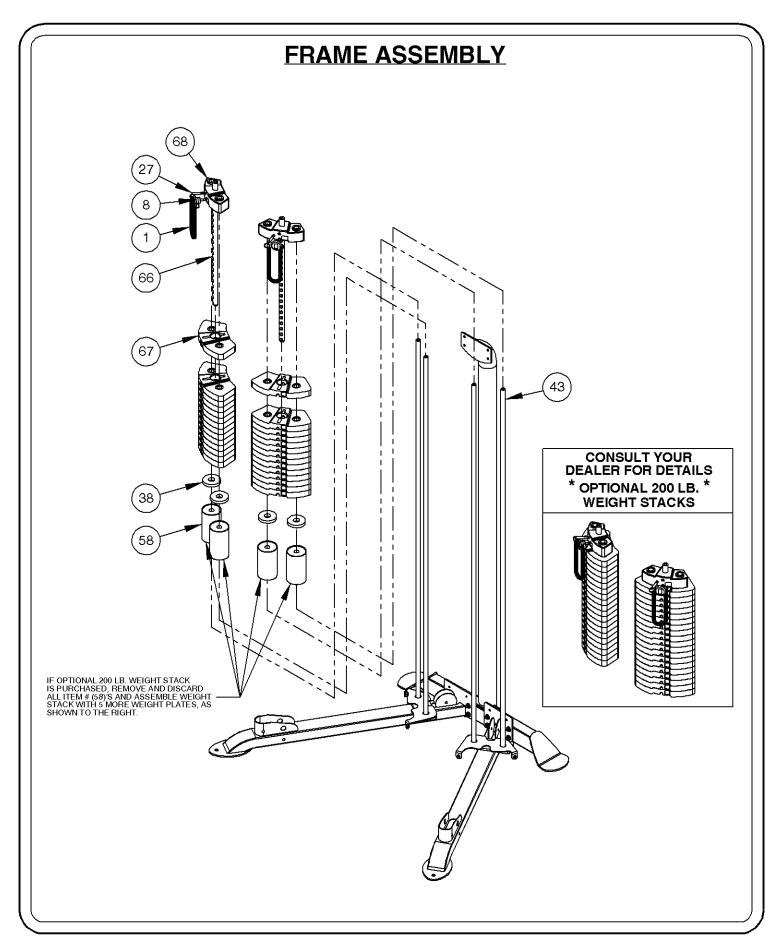



PAGE 07 V-6 ASSEMBLY

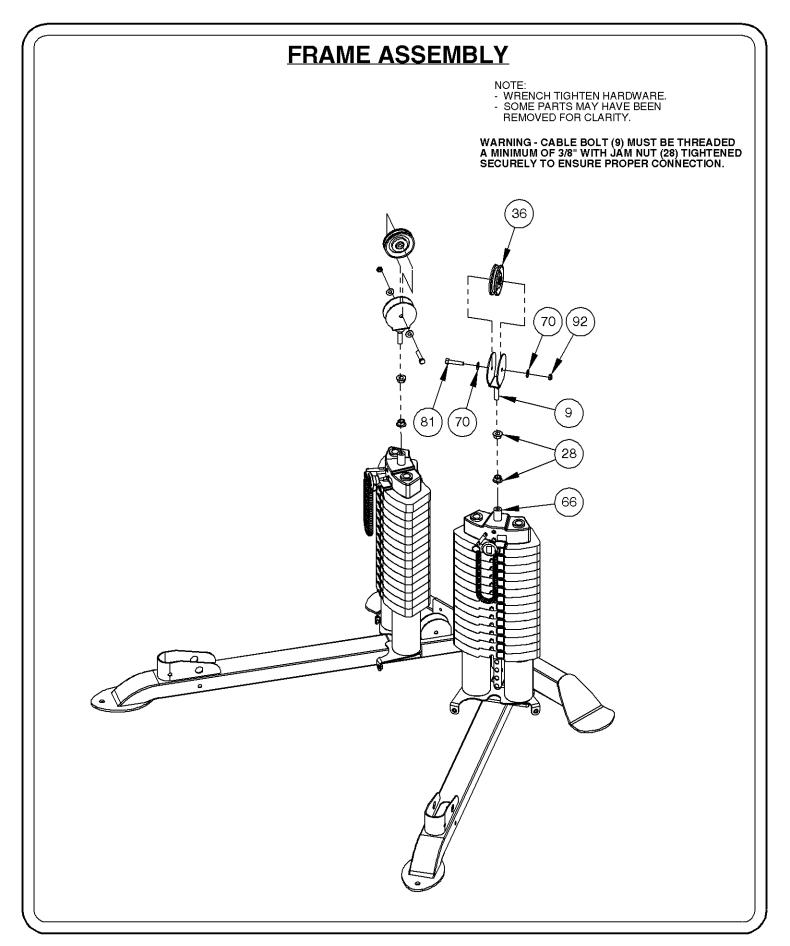

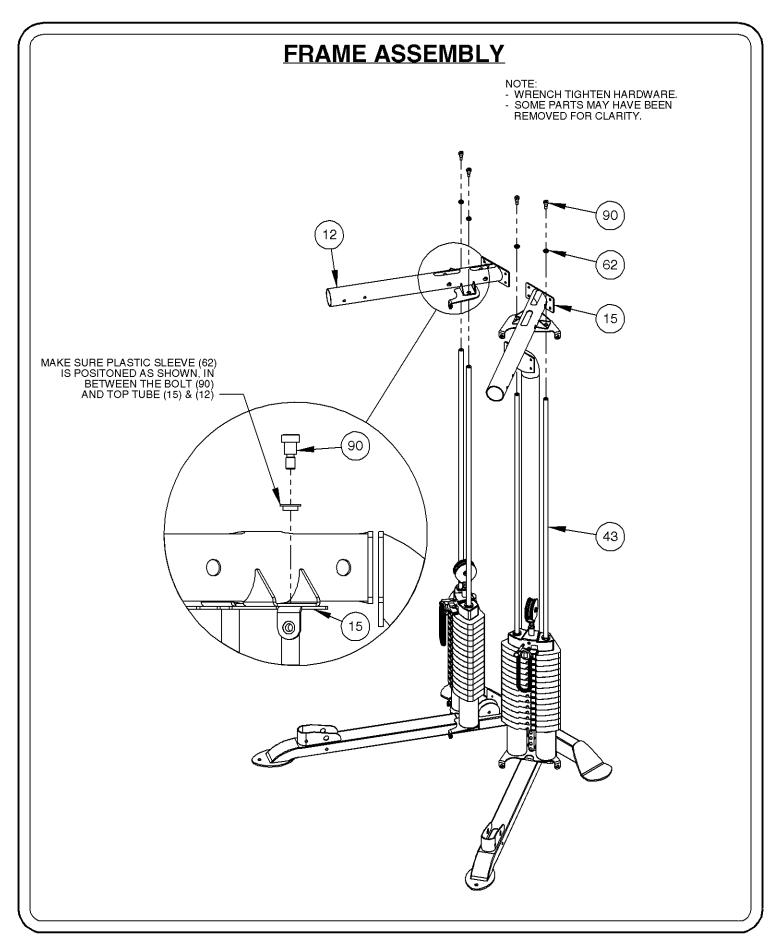



PAGE 09 V-6 ASSEMBLY

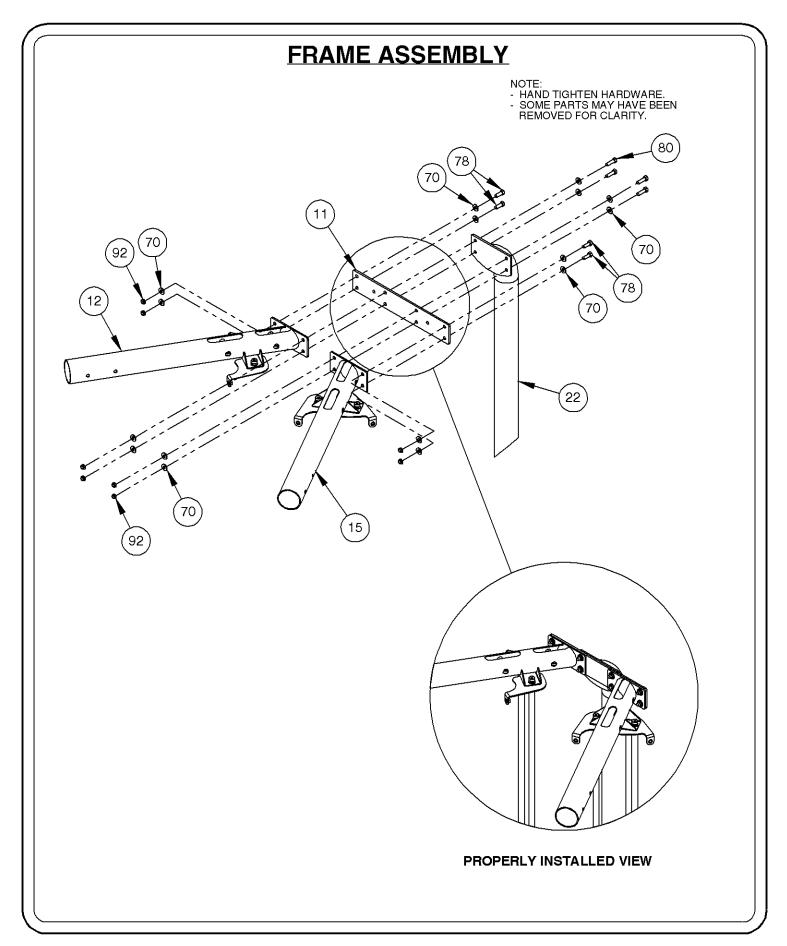

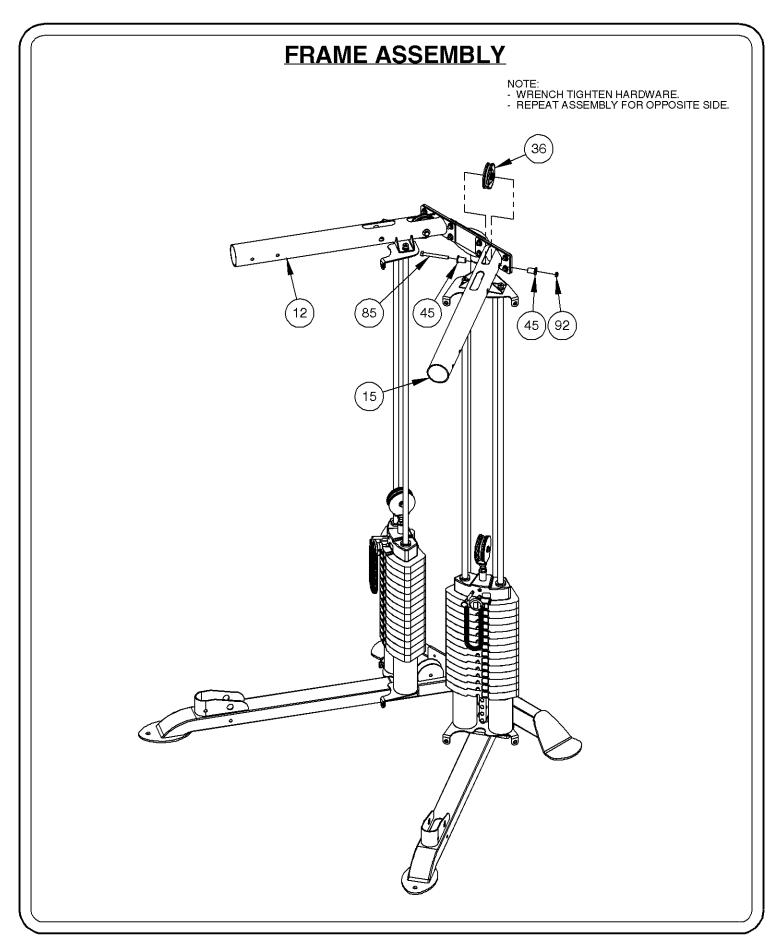



PAGE 11 V-6 ASSEMBLY

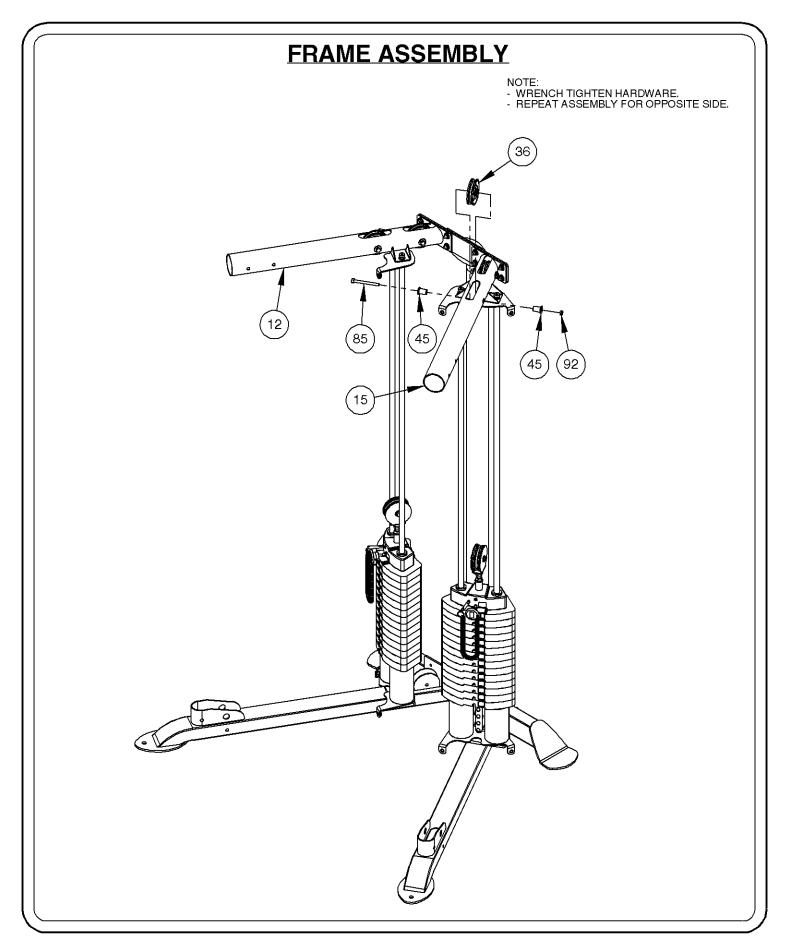

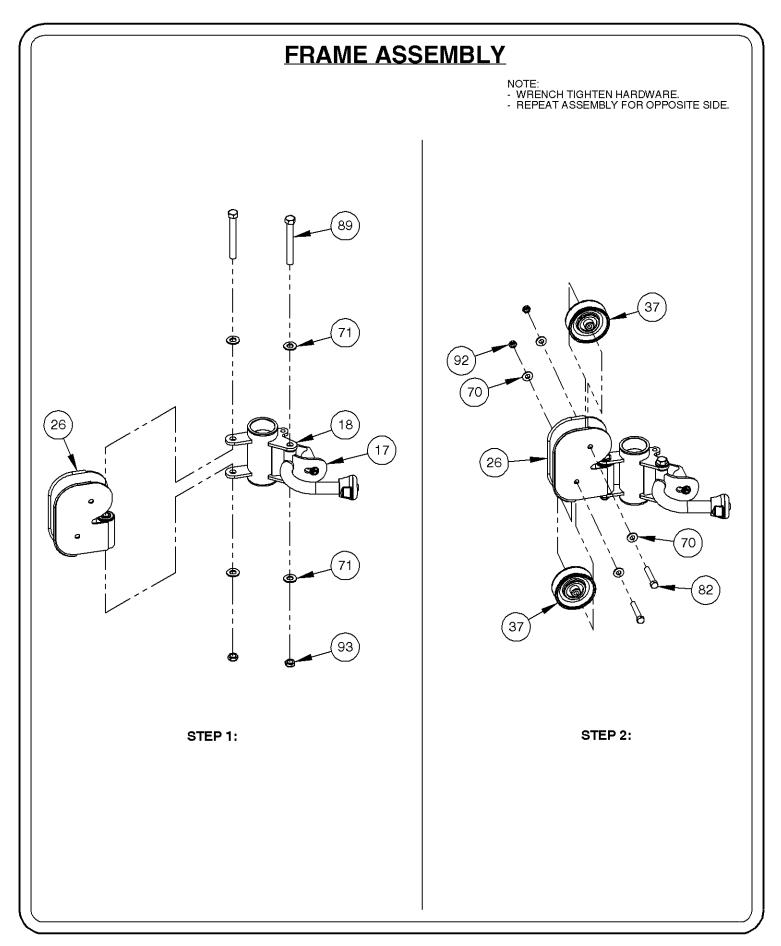



PAGE 13 V-6 ASSEMBLY

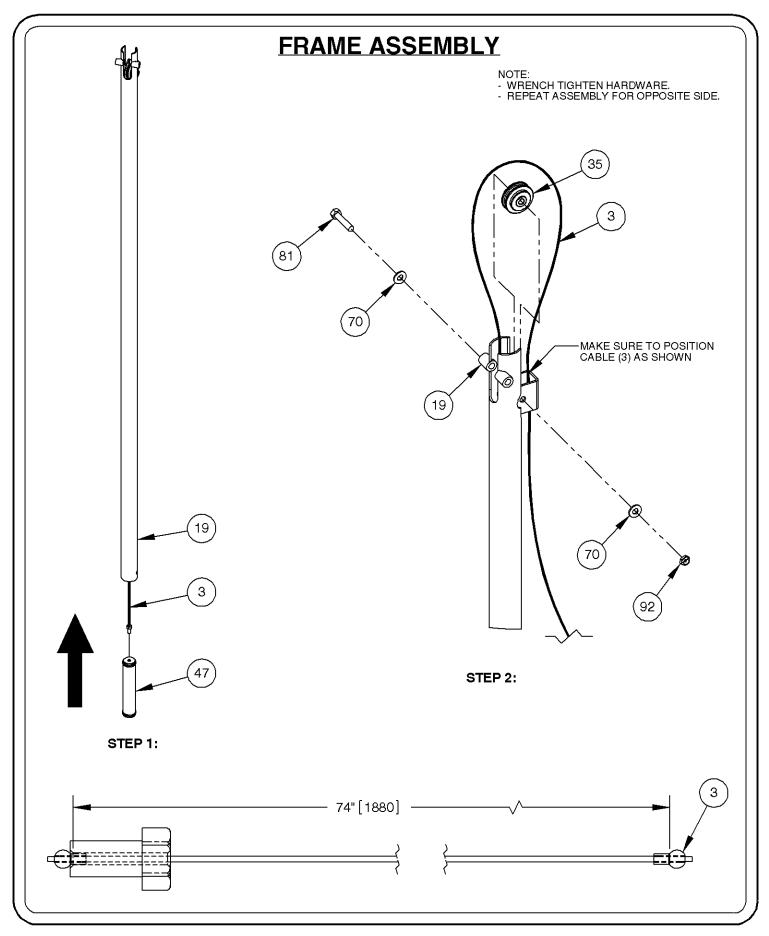

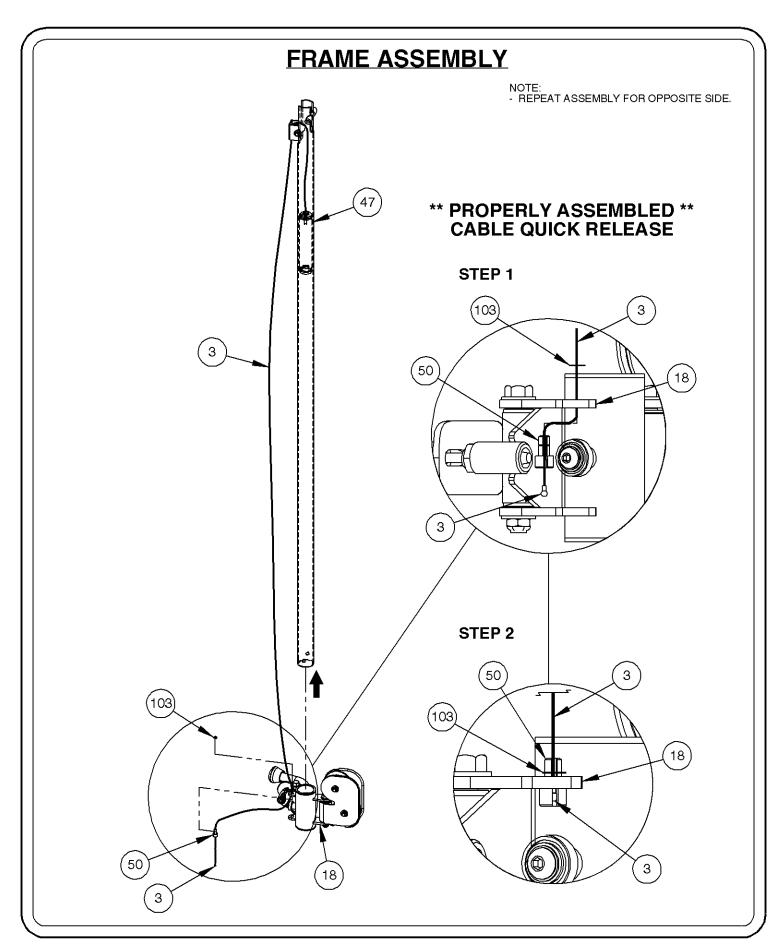


PAGE 15 V-6 ASSEMBLY

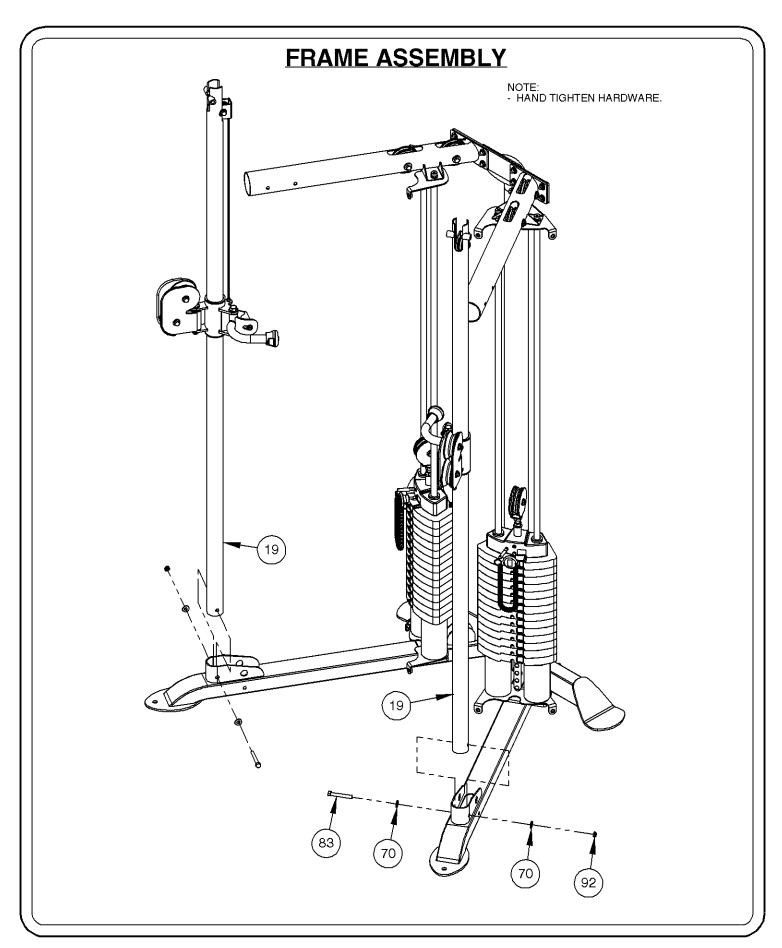

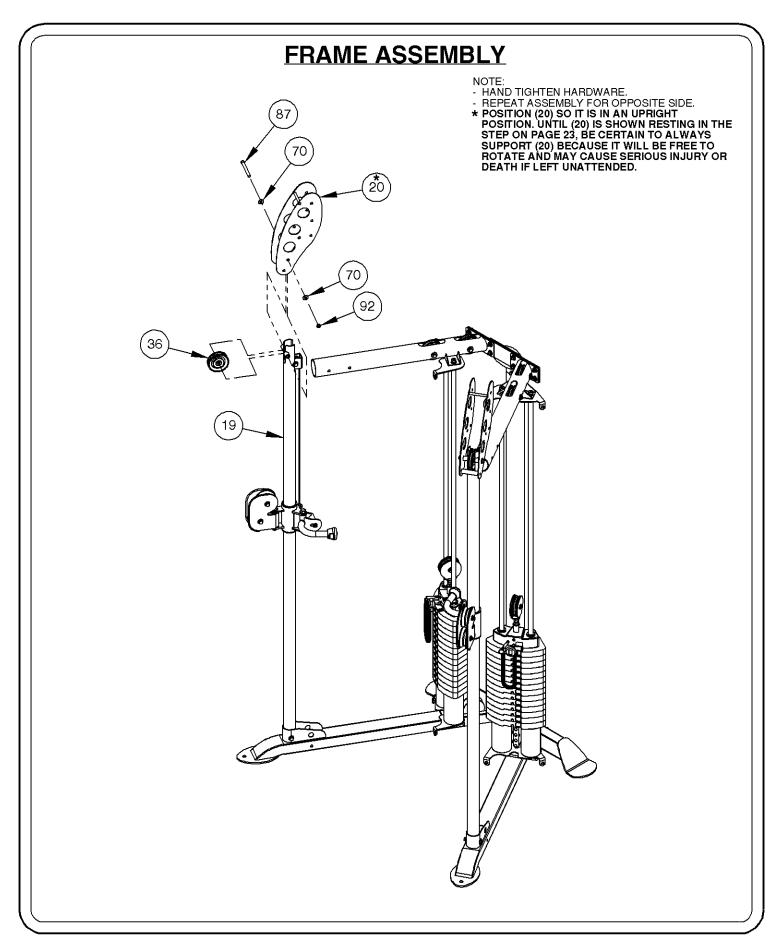



PAGE 17 V-6 ASSEMBLY

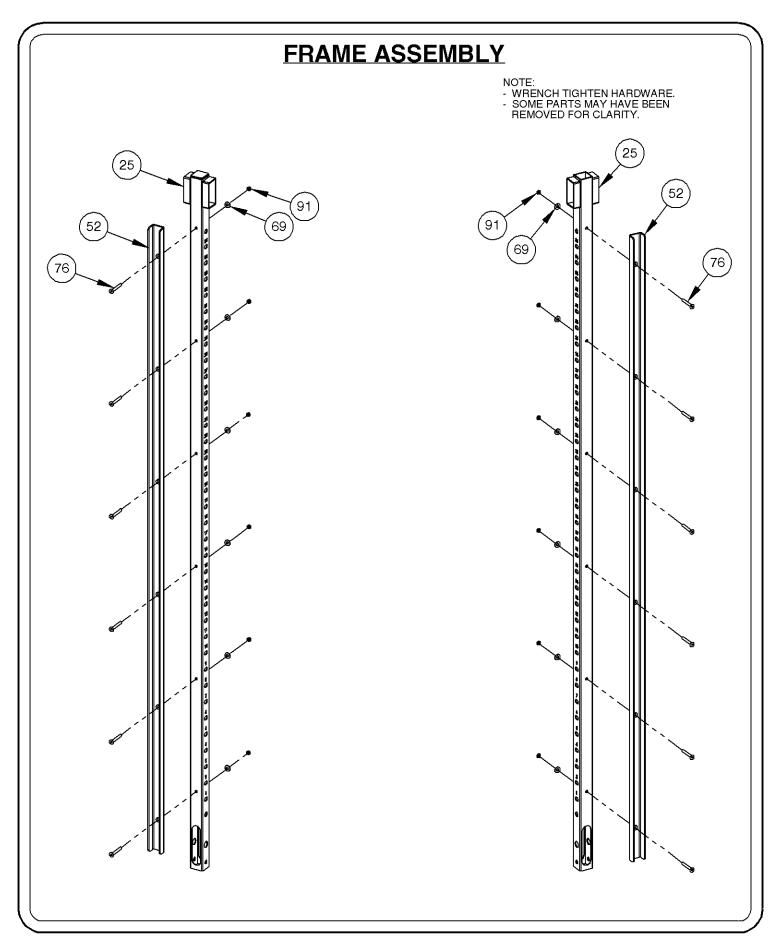

THIS PAGE WAS INTENTIONALLY LEFT BLANK


PAGE 19 V-6 ASSEMBLY

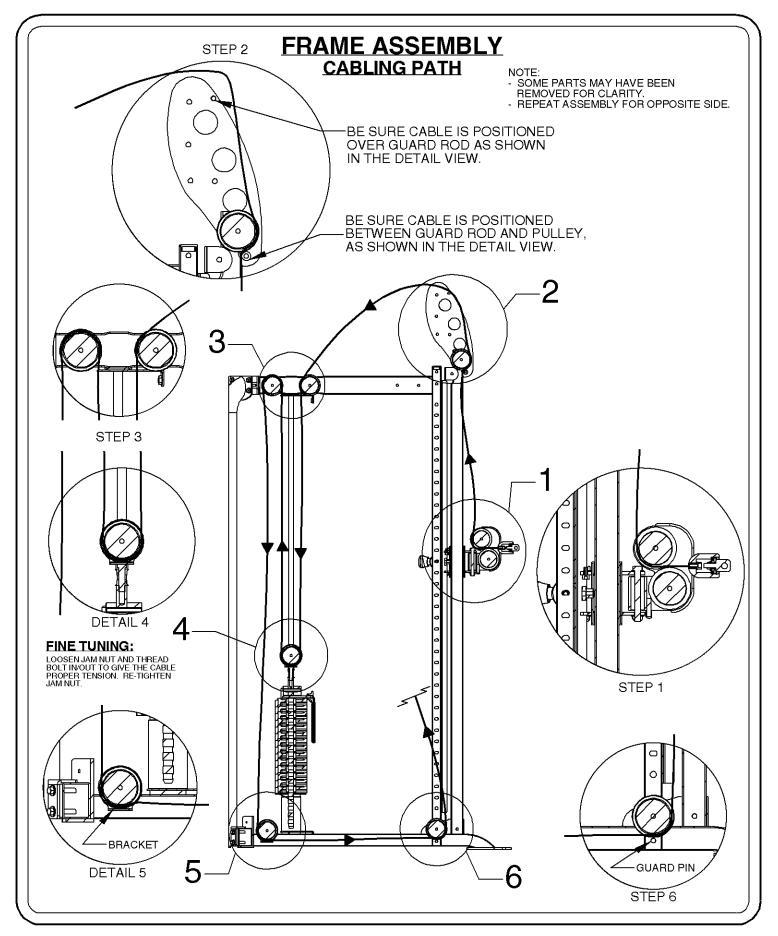

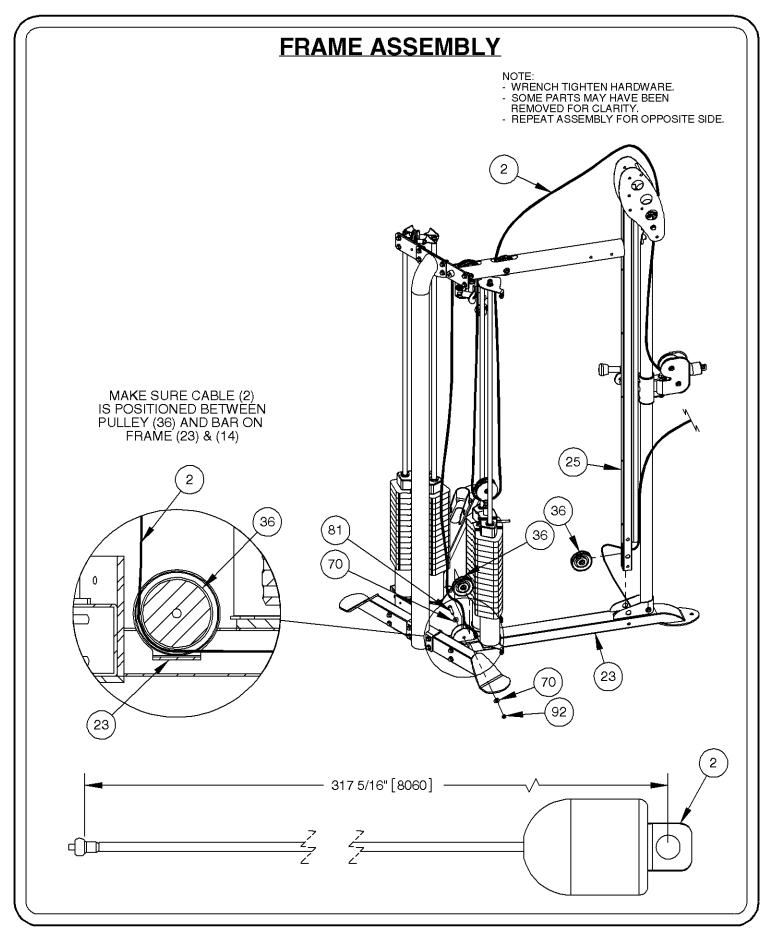



PAGE 21 V-6 ASSEMBLY

THIS PAGE WAS INTENTIONALLY LEFT BLANK

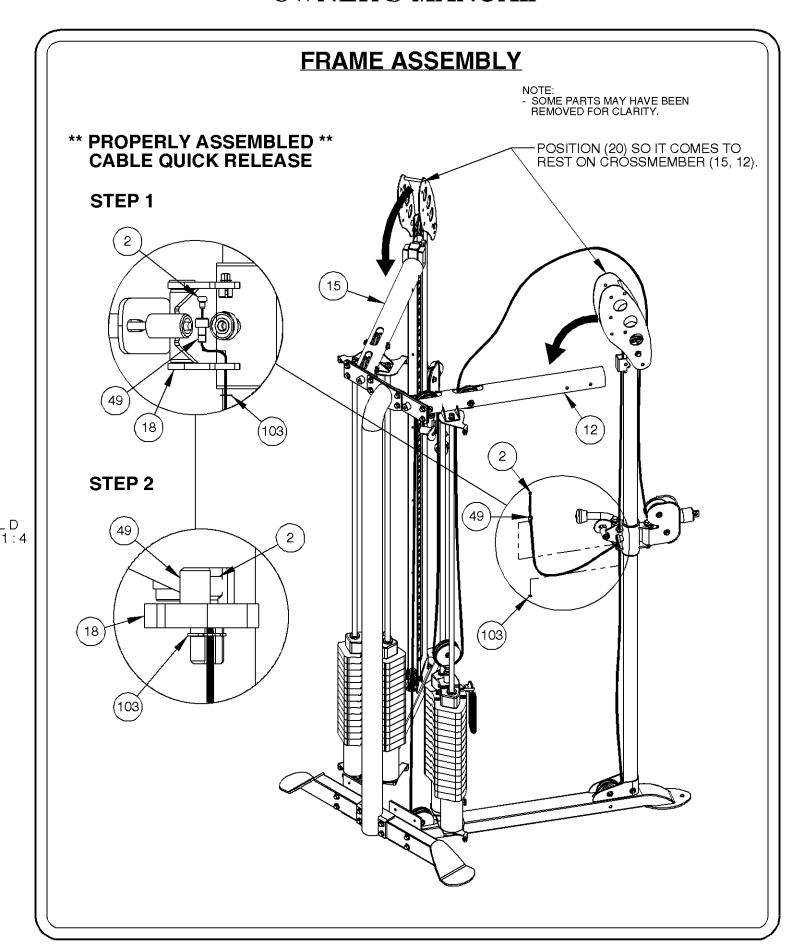



PAGE 23 V-6 ASSEMBLY

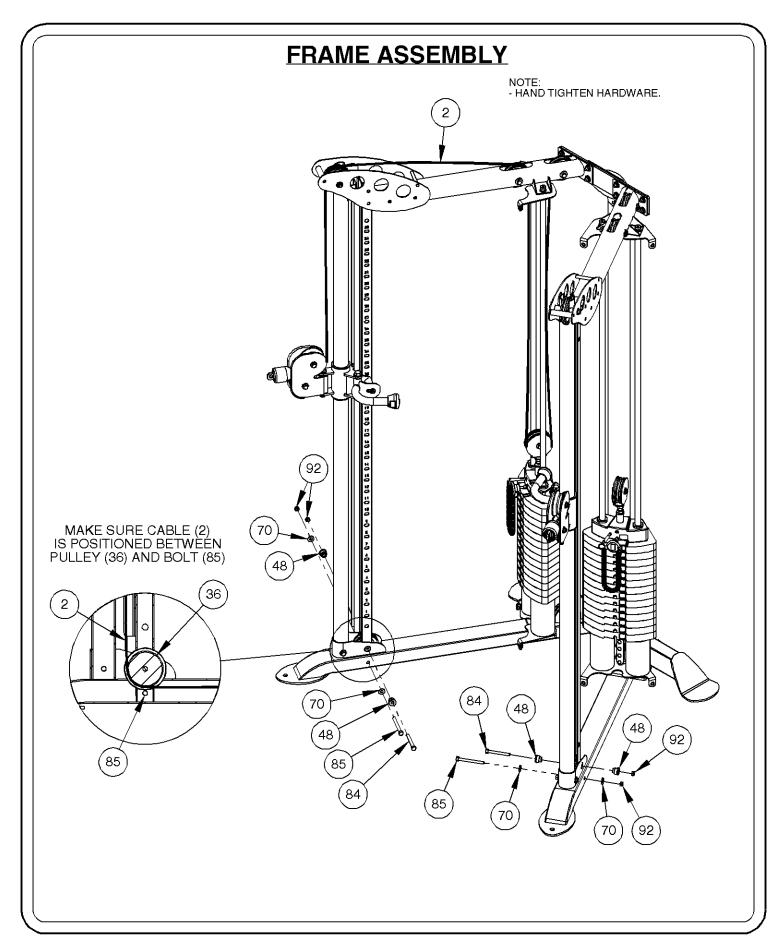

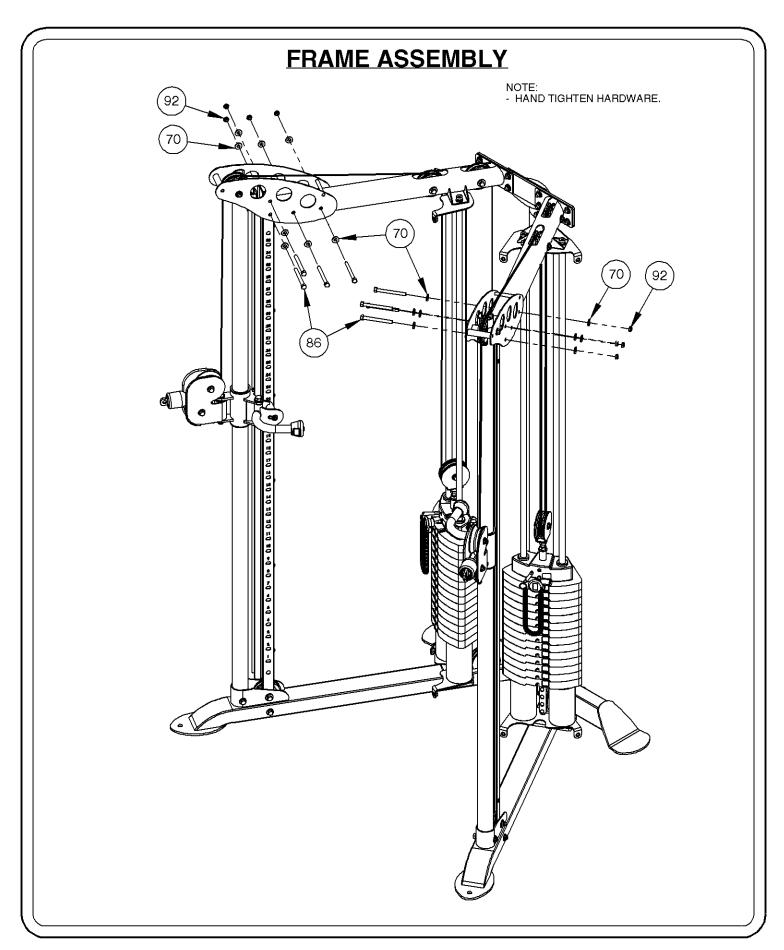


PAGE 25 V-6 ASSEMBLY

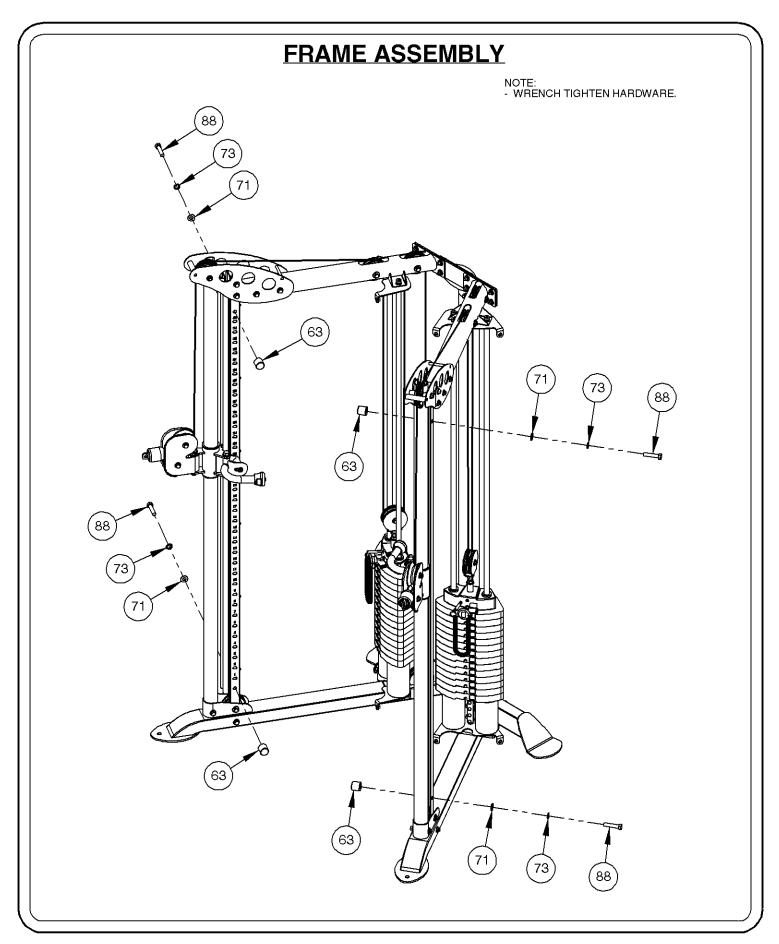


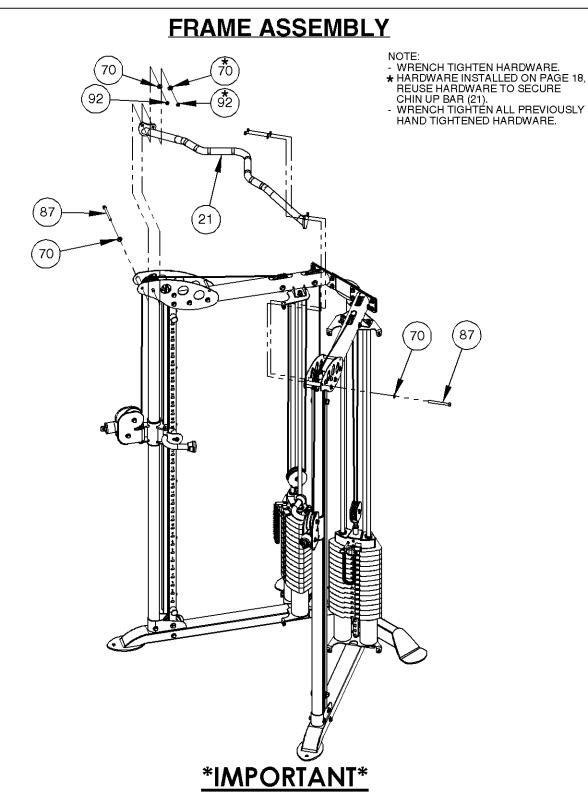


NOW THAT THE V-6 IS COMPLETELY ASSEMBLED TAKE TIME TO ASSURE THAT YOUR UNIT IS ASSEMBLED SQUARE AND PERPENDICULAR. USE A LEVEL TO CHECK THAT THE GUIDE RODS ARE PERPENDICULAR IN BOTH DIRECTIONS. IF THEY ARE NOT PERPENDICULAR IN BOTH DIRECTIONS, IT WILL BE NECESSARY TO LOOSEN SOME FRAME HARDWARE TO RE-ALIGN THE FRAME AND RETIGHTEN BOLTS.


PAGE 27 V-6 ASSEMBLY

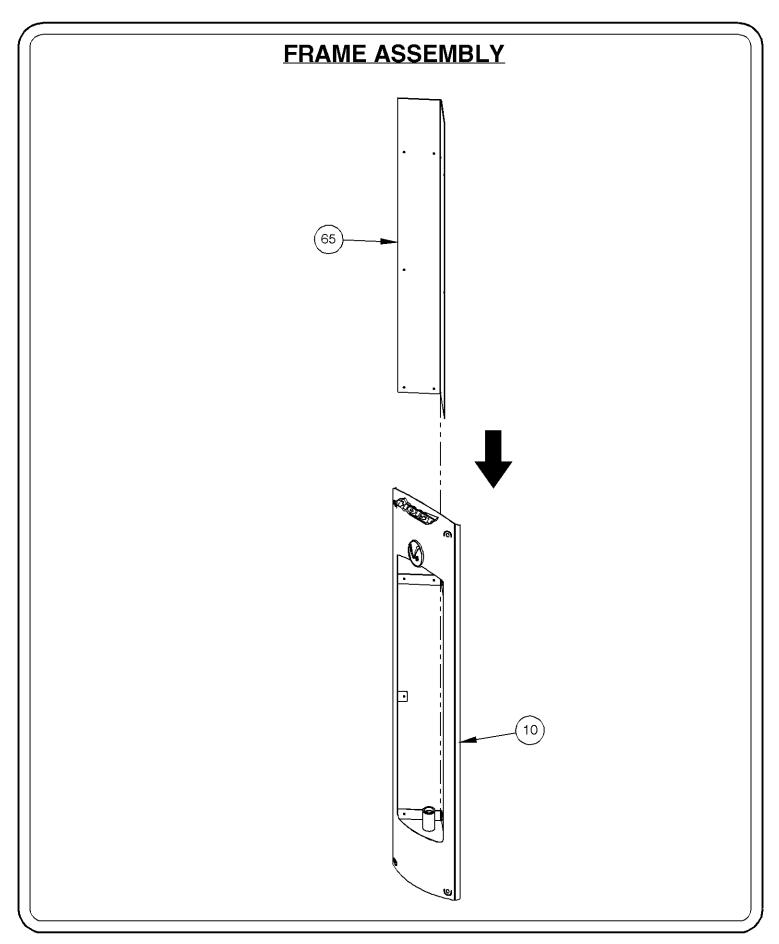

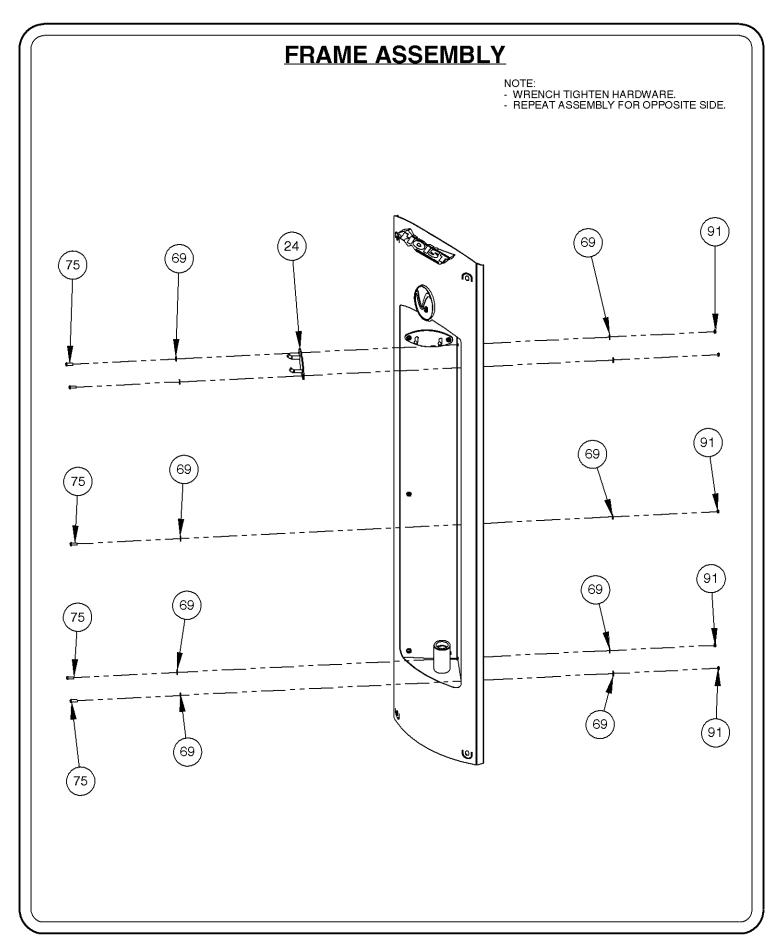



PAGE 29 V-6 ASSEMBLY

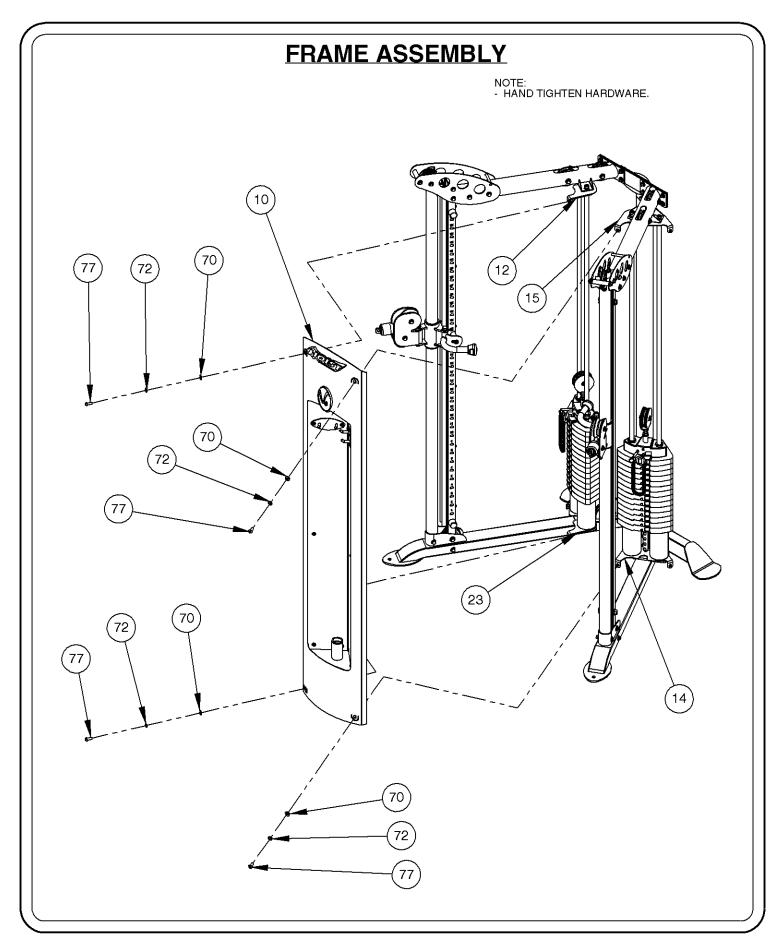

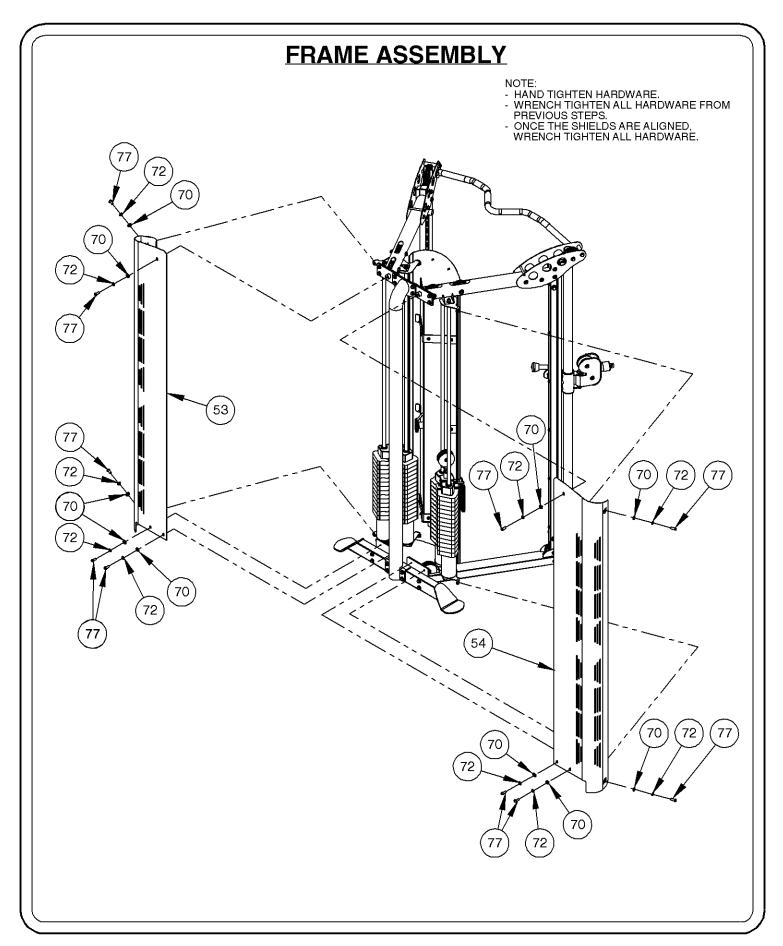


PAGE 31 V-6 ASSEMBLY

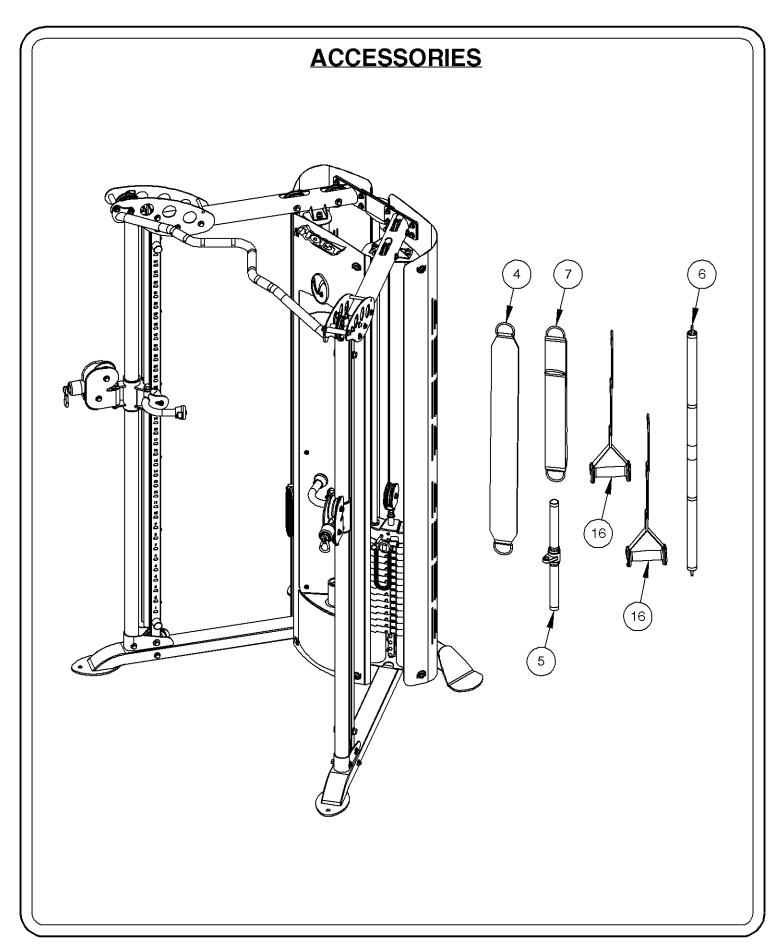

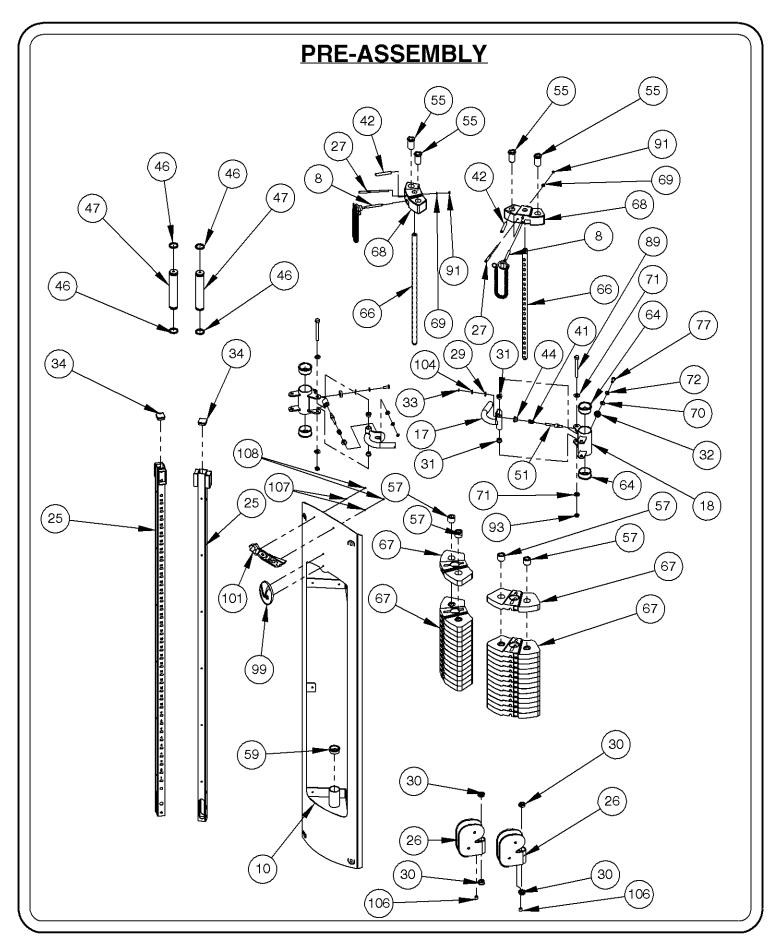


PAGE 33 V-6 ASSEMBLY

THIS PAGE WAS INTENTIONALLY LEFT BLANK

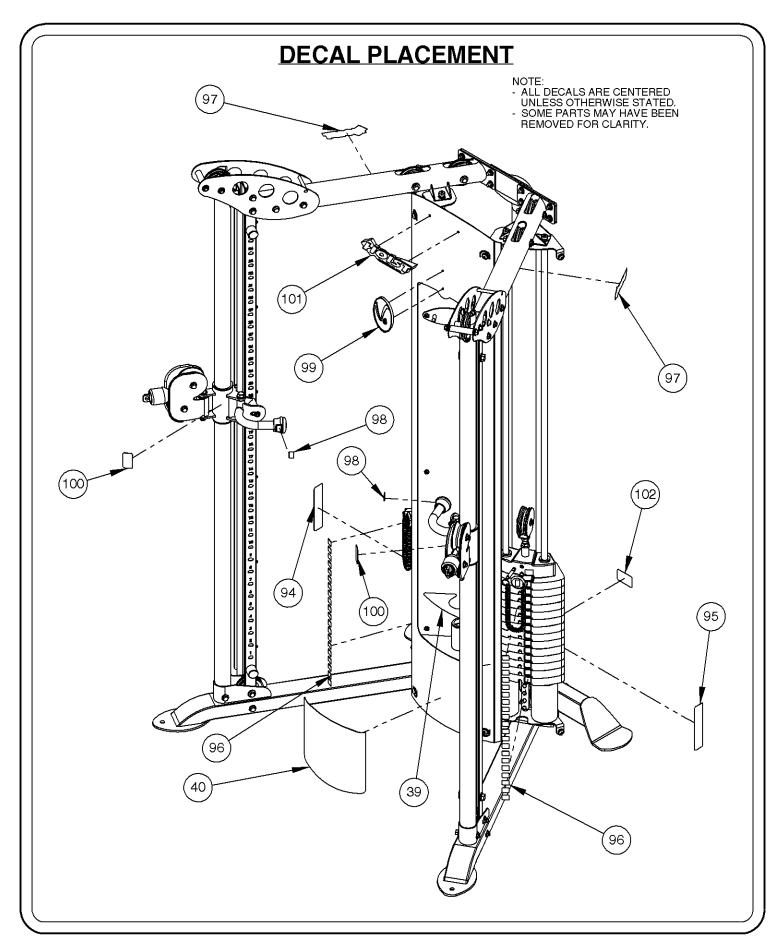

PAGE 35 V-6 ASSEMBLY

DECAL REFERENCE

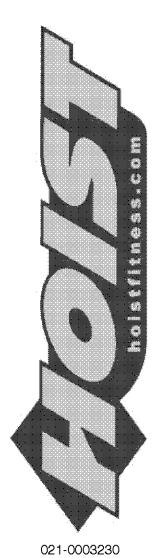

1	NO	****			****	r. Hag
-		01100v	Minin	90000	ANNING ANNING	rivivi
**********	COMMERCIAL MARTISTANCI					× .
***********	Tespect; Links, PUI Pins.	dedexistation of the second				
************	Soop Locks, Sweets, Weight Stack	*				
************	Pro Close:					
***************************************	Liphalstery Inspect:	e vive	٠,,,,		.,,,,,	,
***********	Cables or Selts. end their termion					
***************************************	Inspect; Accessory Bare	Name of the last o	JK			****
************	and Fixedies Inspect(Arbeitannessen				
***********	: All Decein Inspect; All rests and	Security Sec		tiivii	ededec	iiviv
***********	Boits Tighten If Newcard	io kininganyakin	1000			
**********	ksup⇒ct: Arti-Skid Surfaces	skindski kiddoki kitik	k.			
***************************************	Cioner & Luciascoles, Guicio Racia vi 20 a	six socializado de la companio della companio de la companio della		×		
***********	Fellon (FTFE) based Libricant (Superube)	index kadelek kalede				
***************************************	Lubricate: Seat Sitewas. Turcae Buskings:	*Arbeiroldex kridendes@iii		×		
**********	Carron A. Vasa	delocate delocate del		ALALAI	.i.ki.k#	i.ki.i.m
***********	Al Gossy Frishes	del Sections de la company de		imici	×	he shooise
***************************************	Repesit with Greek Uniter Bearings	ikidadsik kidalaiski.			Nga.	
***************************************	Recisee Caoles, Beirs	Sylvinidexisting				×
***************************************	and Constituting Pasts,	- Additional Actions of the Control				ار

HISE ONLY GENEINE REPLACEMENT PARTS, FAILURE TO DO SO WILL VOID PARRANTY AND COULD RESULT IN PERSONAL INJURY OR EVEN DEATH. THERE IS A RISK ASSUMED BY INDIVIDUALS WHO USE THIS TYPE OF EQUIPMENT, TO MINIMIZE THE RISK ALMAYS FOLLOW THESE SIMPLE RULES. . READLA UNDERSTAND ALL ENCLOSED INSTRUCTIONS before udng it la equipment. LINSPECT EQUIPMENT BEFORE EACH USE. Replace all soms at the instraigns of wear or carrage. If in double about a certain part. DO NOT use the represent until the part is replaced. Failure to replace som or dameged parts may result in injury. S. POLICHIFACUTHE MAINTENANCE SCHEOULE 4. CONSULT YOUR PHYSICIAN BEFORE STAPTING ANY EXERCISE PROGRAMA INJumios properly belong engaging a weight resistence trabing. Stop exercising it you teel fails, or clary. . TO PREVENT THE POSSIBILITY OF SEMOUS INJURY, KEEP (2,548) OF ALL MOVING PARTS, Box 55 affempt to tree any jaminet part by yourself. Obtain assistance in order to void passible injury. 6. Take your time and do not mak the exercise. Practice proper breathing. NEVER hold your preath. 7. CHILDREN SHOULD NOT BE ALLOWED TO USE THIS EQLIPMENT WITHOUT ADULT SUPERVISION, To 270 d pass kleinjery, bystardeis should be kept at a Bale dislance when this aquipment is in use. s: CALL YOUR AUTHORIZED DIGTRIBUTOR IT you have any questions on the properties or Tenance of this equipment.

021-0003198


021-0003008



PHI 021-0003426

021-0003135



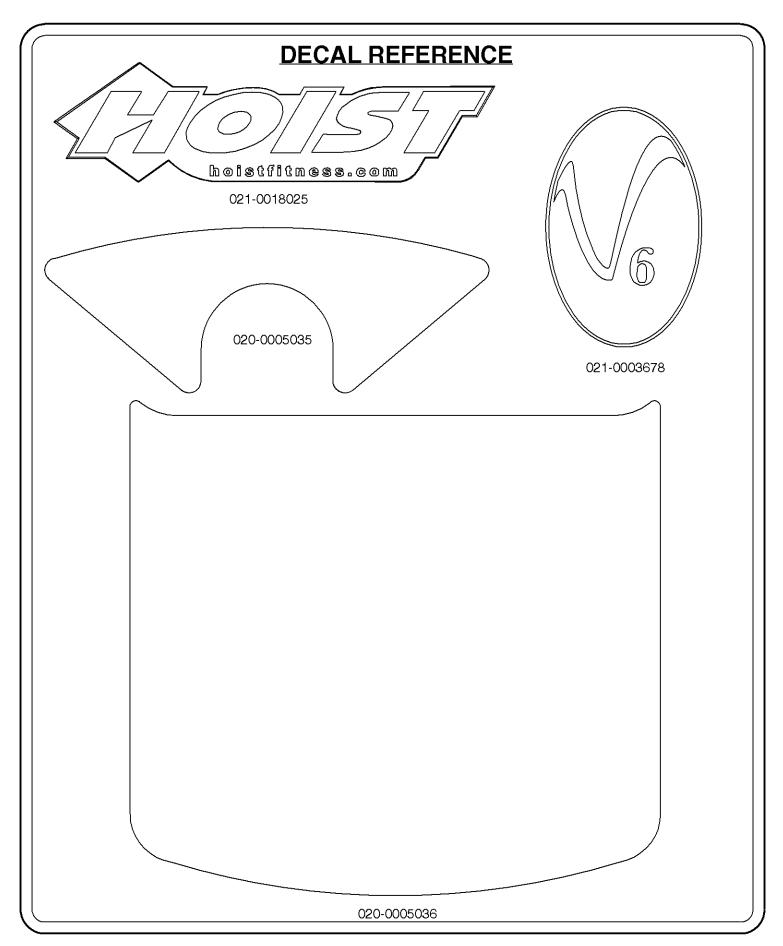

PAGE 37 V-6 ASSEMBLY

THIS PAGE WAS INTENTIONALLY LEFT BLANK

PART LIST

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY		
1	010-0008001	LANYARD COIL	2		
2	010-01C0381	CABLE ASSEMBLY: V6 SWIVEL 317.313" LG.	2		
3	3 010-01C0379 CABLE ASSEMBLY: V HI-LO COUNTER WEIGHT 74" LG				
4	020-0003004	CHIN ASSIST 4" WIDE			
5	026-01X1118	ALUMINUM CURL BAR ASSEMBLY	1		
6	026-01X1121	ALUMINUM STRAIGHT BAR ASSEMBLY	1		
7	026-01X1635	FLEECE KNEE STRAP WITH (3) D-RINGS ASSEMBLY	1		
8	026-01X2039	RADIAL CAST WT.SELECTOR PIN ASSEMBLY	2		
9	026-01X2358	ADJUSTABLE PULLEY MOUNT ASSEMBLY Ø 3.50"	2		
10	026-01X3379	CENTER SHIELD ASSEMBLY	1		
11	026-01X3380	TOP TIE ASSEMBLY	1		
12	026-01X3381	TOP TUBE ASSEMBLY, LEFT	1		
13	026-01X3382	BASE ASSEMBLY, REAR	1		
14	026-01X3383	BASE ASSEMBLY, RIGHT SIDE	1		
15	026-01X3384	TOP TUBE ASSEMBLY, RIGHT	1		
16	026-01X4057	STRAP HANDLE WITH (3) D-RINGS (LOWER) ASSEMBLY	2		
17	026-01X5067	ADJUST LEVER ASSEMBLY	2		
18	026-01X5069 HI-LO ADJUSTER ASSEMBLY		2		
19	026-01X5091	GUIDE TUBE ASSEMBLY	2		
20	026-01X5093	TOP HEAD ASSEMBLY	2		
21			1		
22			1		
23			1		
24	026-01X5101	HOOK PLATE ASSEMBLY	2		
25	026-01X5102	ADJUSTER TUBE ASSEMBLY	2		
26	026-01X5019	SWIVEL PULLEY HOUSING ASSEMBLY	2		
27	010-0008002	LANYARD PIN	2		
28	012-0202001	1/2"-13 FLANGED NUT (WZ)	4		
29	013-0903007	3/8" PLASTIC WASHER O.D. 3/4" X .062" THICK	2		
		BEARING: FLANGED BALL BEARING Ø .50" I.D.	4		
31	014-0101002	BUSHING: OILITE FLANGED .75" O.D X .50" I.D X .38" LG.	4		
		BEARING: BALL BEARING, Ø .39" I.D.	2		
33	014-0015026	E-CLIP .31"	2		
34	016-0101004-B	1.50" X 1.50" END CAP (BLACK)	2		
35			2		
36			12		
37	018-0002015		4		
38	019-0001006	THICK RUBBER DONUT Ø3.00" X .50" BLACK	4		
39	020-0005035	NON-SKID: V-6 SHELF COVER	1		

PAGE 39 V-6 ASSEMBLY

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.	
40	020-0005036 NON-SKID: V-6 FRONT SHIELD GUARD		1	
41 020-0011009		SPRING	2	
42	030-0303006	ROLL PIN Ø 7/16" X 3.00" LG.	2	
43	026-01G0405	GUIDE ROD: Ø.75" CRS X 72.95" LG.	4	
44				
45	026-01M0551	HEAVY FLANGED SPACER: .391" I.D. X 1.00" LG.	8	
46	026-01M2343	COUNTER WIEGHT RING	4	
47	026-01M2536	COUNTERWEIGHT (4.35 LB)	2	
48	026-01M2555	HEAVY FLANGED SHOULDERED SPACER .86"OD X .39"ID	4	
49	026-01M2561	QUICK RELEASE CABLE LOCK Ø.34" ID	2	
50	026-01M2562	QUICK RELEASE CABLE LOCK Ø.26" ID	2	
51	026-01M2564-3	PULL PIN: SHORT TAPERED END	2	
52	026-01P6125	CHANNEL: 1.00" X 1.47" X 72.00" LG.	2	
53	026-01P6154	SHIELD, RIGHT	1	
54	026-01P6155	SHIELD, LEFT	1	
55	026-01PL0134	GUIDE ROD BUSHING	4	
56	026-01PL0206-27	GRIP OPEN END Ø 1.00" ID X 7.00" LG.	2	
57	026-01PL0269	CAST WEIGHT BUSHING	56	
		WEIGHT STAND OFF	4	
59	026-01PL0371	DELRIN BUSHING	1	
60			2	
61			2	
62			4	
63	026-01PL2417	PLASTIC STOP: Ø1.25" OD X 1.25" LG.	4	
64	026-01PL2418	BUSHING: FLANGED 2.28" OD X 2.03" ID X 1.00" LG.	4	
65	026-01PL2425	.125" ABS PLASTIC (BLACK)	1	
66	026-01W0139	21 HOLE STEM	2	
67	026-01W0142	10 LBS. INTERMEDIATE RADIAL LOC WEIGHT PLATE	28	
68	026-STD-SWTOP9	CAST RADIAL TOP WEIGHT	2	
69	013-0002003	1/4" X 16mm SAE FLAT WASHER (WZ)	34	
70	013-0402007	3/8" X 22mm FLAT WASHER (WZ)	104	
71	013-0102003	1/2" X 27mm SAE FLAT WASHER (WZ)	12	
72	013-0102022	3/8" INTERNAL LOCK WASHER	18	
73	013-0302014	1/2" INTERNAL LOCK WASHER	4	
74	013-0102020	3/8" SPLIT LOCK WASHER (WZ)	4	
75			10	
76			12	
77			16	
78	011-0407022	3/8"-16UNC X 1.00" HHB (WZ)	4	
79	011-0101034	3/8"-16UNC X 1.25" BHCS (WZ)	2	

PART LIST CONTINUED

NOTE: SOME OF THESE PARTS MAY COME PRE-INSTALLED

ITEM NO.	PART NUMBER	DESCRIPTION	QTY.
80	011-0107037	3/8"-16UNC X 1.25" HHB (WZ)	8
81 011-0407027		3/8"-16UNC X 1.75" HHB (WZ)	6
		3/8"-16UNC X 2.25" HHB (WZ)	4
83	011-0007050	3/8"-16UNC X 2.75" HHB (WZ)	6
84	011-0407026 3/8"-16UNC X 3.00" HHB (WZ)		6
85			6
86	011-0107018	3/8"-16UNC X 3.75" HHB (WZ)	8
87	011-0407025	3/8"-16UNC X 4.00" HHB (WZ)	4
88	011-0407043	1/2"-13UNC X 2.25" HHB (WZ)	4
89	011-0107038	1/2"-13UNC X 4.25" HHB (WZ)	4
90	011-0112002	1/2" X .500" SHSS (WZ)	4
91	012-0104009	1/4"-20 UNC THIN NYLOCK NUT (WZ)	24
92	012-0104008	3/8"-16 UNC THIN NYLOCK NUT (WZ)	48
93	012-0304011	1/2"-13 UNC THIN NYLOCK NUT (WZ)	4
94	021-0003008	DECAL COMMERCIAL MAINTENANCE 1.50" X 6.69"	1
95	021-0003135	DECAL WARNING 1.50" X 6.69"	1
96	021-0003198	DECAL 200 Ib RADIAL WEIGHT STACK # (1-20)	2
97	021-0003230	DECAL HOIST 1.63" X 5.93"	2
98	021-0003426	DECAL PULL	2
99	021-0003678	DECAL V6 BADGE	1
100	021-0003680	DECAL DO NOT USE HANDLE AS STEP	2
101	021-0018025	DECAL HOISTFITNESS.COM LOGO CURVED	1
102	SERIAL # DECAL	DECAL HOIST SERIAL # 1.63" X 2.63"	1
103	014-0015033	EXTERNAL RETAINING RING .44"	4
104	013-0302008	5/16" SAE FLAT WASHER (WZ)	2
105	020-0010002	SNAP LINK	2
106	026-01PL2427	VINYL SLEEVE Ø.50" OD X .38" ID	2
107	013-0102032	1/8" FLAT WASHER (WZ)	2
108	011-0115004	1/8"-SELF TAPPING FHCS (WZ)	2

PAGE 41 V-6 ASSEMBLY

ABBREVIATIONS

BZ = Black Zinc

WZ = White Zinc


HHB = Hex Head Bolt

FHCS = Flat Head Cap Screw


BHCS = Button Head Cap Screw


SHCS = Socket Head Cap Screw


SHSS = Socket Head Shoulder Screw

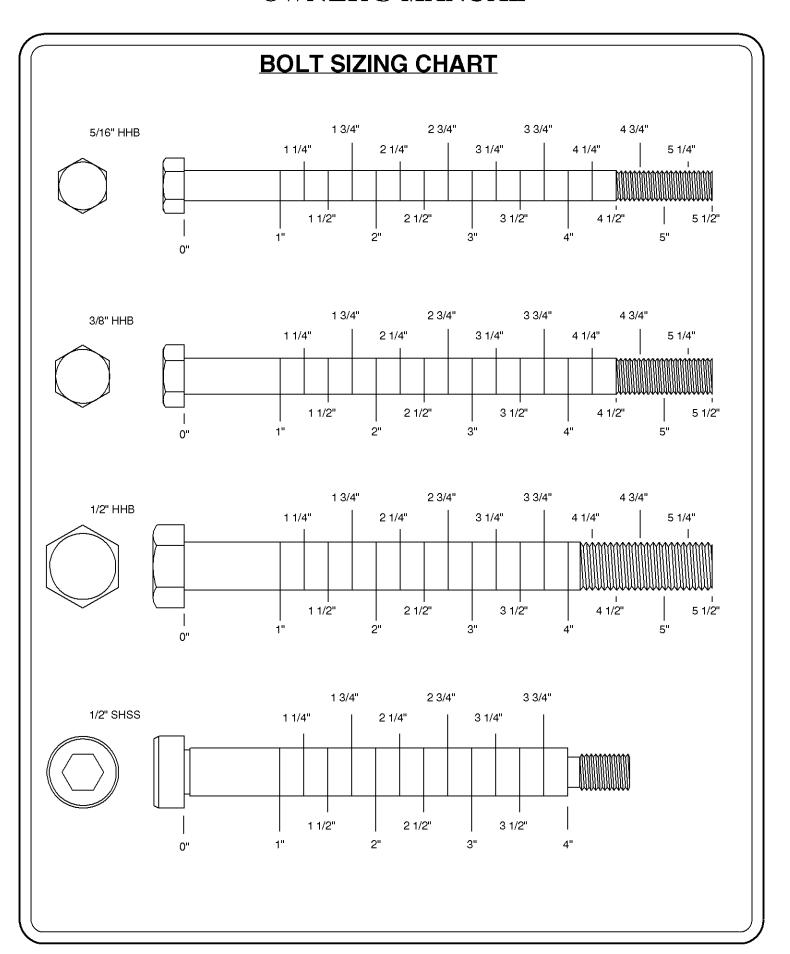

PAGE 43 V-6 ASSEMBLY

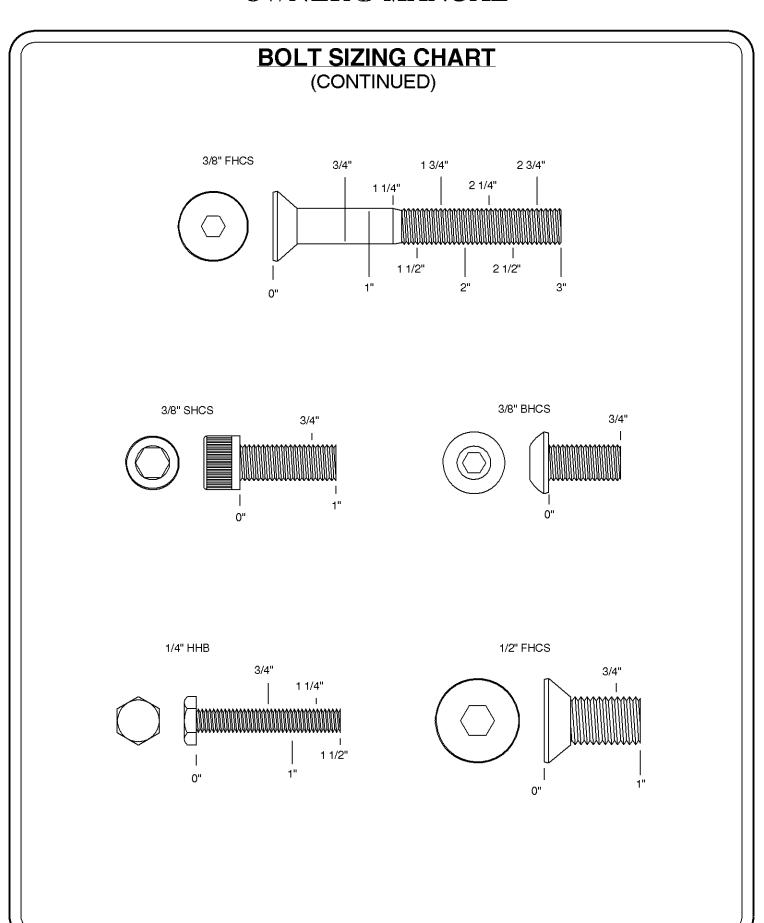

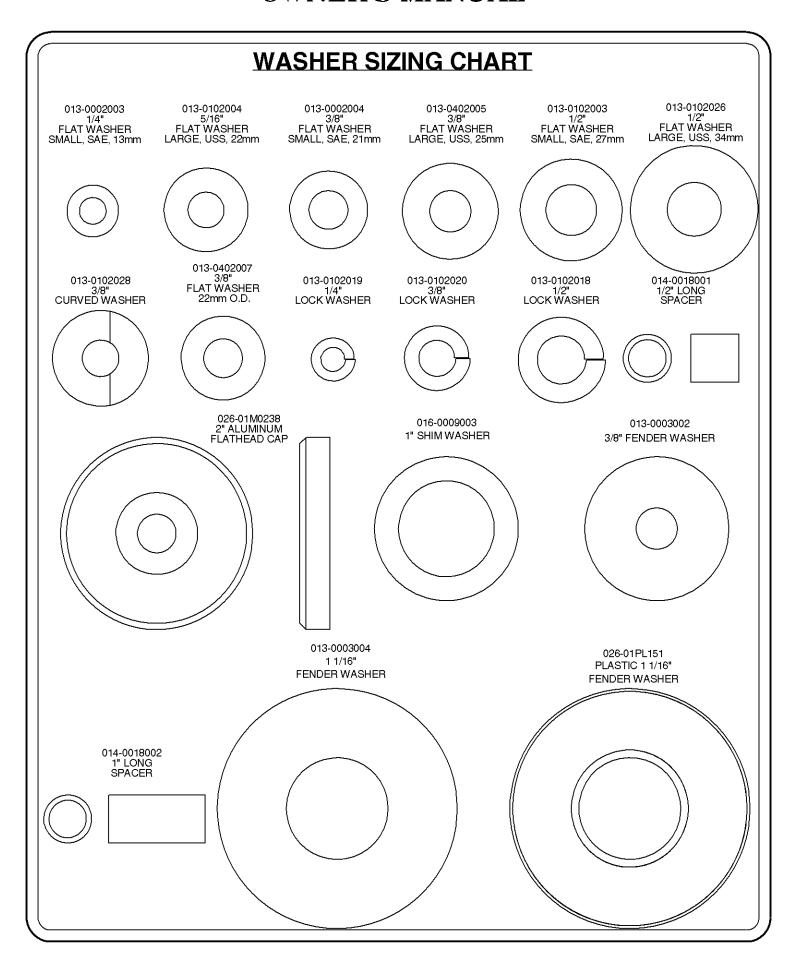

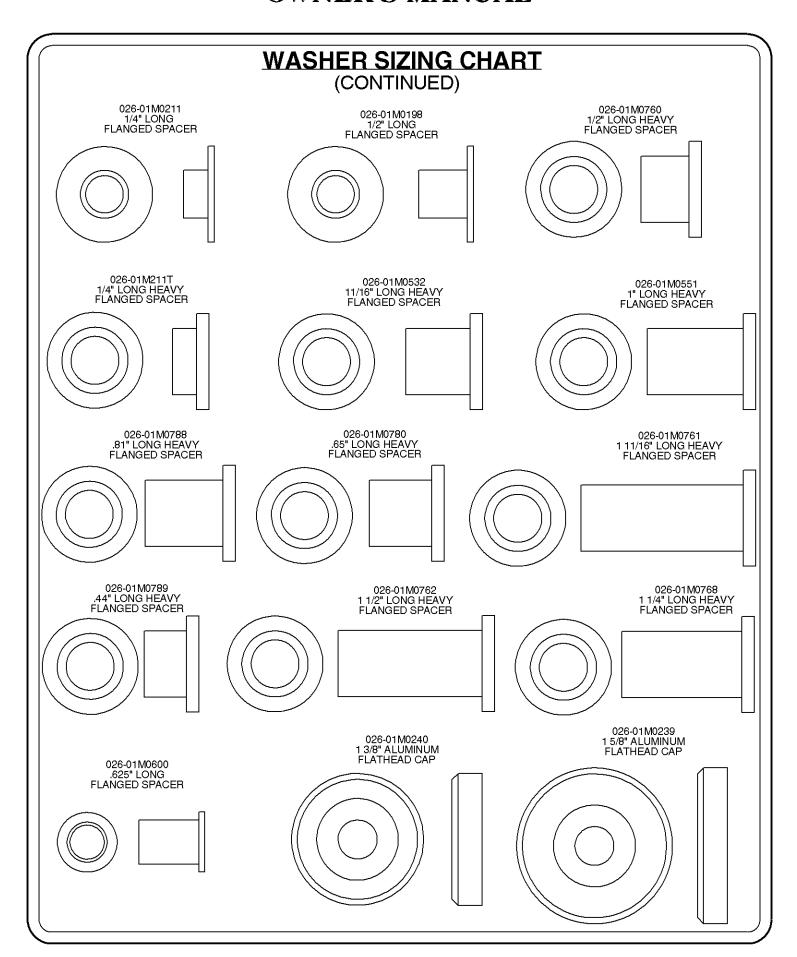

MAINTENANCE SCHEDULE

ROUTINE	COMMERCIAL MAINTENANCE	HOME MAINTENANCE	LATEST DATE ENTRY
Inspect; Links, Pull Pins, Snap Locks, Swivels, Weight Stack Pins	DAILY	WEEKLY	
Clean; Upholstery	DAILY	WEEKLY	
Inspect; Cables or Belts and their tension	DAILY	WEEKLY	
Inspect; Accessory Bars, and Handles	WEEKLY	3 MONTHS	
Inspect; All Decals	WEEKLY	3 MONTHS	
Inspect; All Nuts and Bolts, Tighten if needed	WEEKLY	3 MONTHS	
Inspect; Anti-Skid Surface	WEEKLY	3 MONTHS	
Clean & Lubricate; Guide Rods with a Teflon (PTFE) based lubricant (Superlube)	MONTHLY	3 MONTHS	
Lubricate; Seat Sleeves, Turcite Bushings, Linear Bearing	MONTHLY	3 MONTHS	
Clean and Wax; All Glossy Finishes	6 MONTHS	YEARLY	
Repack with Grease; Linear Bearings	6 MONTHS	YEARLY	
Replace; Cables, Belts and Connecting Parts	YEARLY	3 YEARS	

Your equipment comes with a commercial maintenance decal. For personal, in home use, please follow the home maintenance schedule listed above.

PAGE 47 V-6 ASSEMBLY

HOIST FITNESS SYSTEMS GENERAL MAINTENANCE INFORMATION

Links, Pull-Pins, Snap Hooks, Swivels, Weight Stack Pins:

- *Check all pieces for signs of visible wear or damage.
- *Check springs in snap hooks and pull-pins for proper tension and alignment.
- *If the spring sticks or has lost its rigidity, replace it immediately.

Upholstery:

- *To ensure prolonged upholstery life and proper hygiene, all upholstered pads should be wiped down with a damp cloth after every workout.
- *Periodically take the time to use a mild soap or an approved vinyl upholstery cleaner to deter the onset of cracking or drying. Avoid using any abrasive cleaners or cleaners not intended for use on vinyl.
- *Replace ripped or warn upholstery immediately.
- *Keep sharp or pointed objects clear of all upholstery.

Decals:

Inspect and familiarize yourself with any safety warnings or other user information posted on each decal.

Nuts and Bolts:

- *Inspect all nuts and bolts for any loosening and tighten if needed.
- *Go through a re-tightening sequence periodically to ensure that all hardware is tensioned proper.

Anti-Skid Surfaces:

*These surfaces are designed to supply secure footing and need to be replaced if they appear worn or become slippery.

Belts and Cables:

- *Hoist uses only high quality belt, and mil-spec cables.
- *Visually inspect the belts and cables for fraying, cracking, peeling or discoloration.
- *While the machine is not in use, carefully run your fingers along the belt or cable to feel for thinning or bulging areas.
- *Replace belts and cables immediately at the first signs of damage or wear. Do not use equipment until belts or cables have been replaced.

Belt and Cable Tension:

- *Referring to the Owners Manual, when belts or cables are used check all bolts attachments to be sure they are properly attached.
- *Check slack in cables and re-adjust cable tension if needed.

Seat Sleeves, Guide Rods:

- *Wipe down adjusting tubes with a dust free rag before applying lubricant.
- *Lubricate seat sleeves and Guide Rods with a Silicon or Teflon based lubricant spray.

Linear Bearings:

*Referring to the Owners Manual carefully disassemble the bearing from its housing and place a finger full of light grease (lithium, super lube, etc.) into the inside of the bearing. Using your finger, press the grease into the ball-bearings and their tracks. repeat until the ball-bearing tracks are full of grease. Insert the shaft back into the bearing and wipe off excess grease.

PLEASE KEEP THIS FOR YOUR RECORDS

WEIGHT TRAINING TIPS

Use this manual to guide you through the basic exercises you can perform on your V-6 HOIST® Fitness System. To gain maximum results and avoid possible injury, consult a fitness professional to develop your complete exercise program.

Always consult your physician before starting any exercise program.

To be successful in your exercise program, it is important to develop an understanding of the basic principles of strength training. Now that you have your V-6 HOIST® Fitness System, it is only natural that you want to get started immediately. First, determine a set of realistic goals and objectives for yourself. By deciding on an exercise plan that is right for you prior to starting, you will contribute significantly to your success.

Warm up properly before engaging in weight resistance training. Stretching, yoga, jogging, calisthenics or other cardiovascular exercise can help prepare your body for the heavier workload of lifting weights.

Learn how to perform the exercise correctly before using heavy weight. Correct form is important to avoid injury and to ensure that you work the proper muscle groups.

Know your limitations. If you are new to weight training or are embarking on an exercise regimen after a long layoff, start slowly and build foundational strength over a longer period of time.

Pay attention to your breathing. Exhale when you exert is a general rule of thumb. Never hold your breath.

Enjoy your V-6 HOIST® Fitness System!

PAGE 49 V-6 ASSEMBLY

THIS PAGE WAS INTENTIONALLY LEFT BLANK

Exercise Totals Date S Ħ 8 S R × S R ~ മ R 8 S R × S R 8 S R 8 S R = \mathbf{S} R 8 S R × S R 8 S \mathbb{R}

WEIGHT TRAINING EXERCISE LOG

S = Sets R = Repetition per set W = Weight used

HOIST FITNESS SYSTEMS LIMITED LIFETIME WARRANTY

Hoist Fitness Systems warrants this product to the **original purchaser** to be free from defects in workmanship and/or materials under normal use or service. If at any time a component part is defective, Hoist Fitness Systems shall repair or replace it (at Hoist Fitness Systems option) within a reasonable period of time. This warranty does not cover costs of removal. transportation or reinstallation. This warranty shall not apply if the defect was caused by misuse, neglect or normal wear and tear

WARRANTY CLAIMS. All claims require: Model number, Serial number, Date of installation, and any information supporting the existence of the alleged defect.

To complete Warranty Registration visit: www.HOISTFITNESS.com and click on the Warranty Registration link

Starting from the original date of purchase, normal wear and tear shall be considered as the following:

COMMERCIAL USE: All malfunctions of upholstery, grips, paint, and chrome that occur after one year; all malfunctions of electronic components, belts, or cables after one year; all malfunctions of pulleys, bearings, or bushings that occur after five years. The frame and all welded components are warranted for the life of the product.

HOME USE: All malfunctions of grips, paint, and chrome that occur after ten years; all malfunctions of electronic components, belts, cables, or upholstery that occur after ten years; all malfunctions of pulleys, bearings, or bushings that occur after ten years. The frame and all welded components are warranted for the life of the product.

PLEASE NOTE THAT NOT ALL HOIST PRODUCTS ARE MADE FOR COMMERCIAL USE.

Refer to the instructions page of your owners manual or consult with you fitness product dealer to establish if a product is made for commercial use or not. Using a non-commercial product in a commercial setting can result in serious injury or death!

Hoist Fitness Systems sole responsibility shall be to repair or replace the component within the terms stated above. Hoist Fitness Systems shall not be liable for any loss or damage of any kind including any incidental or consequential damages resulting, directly or indirectly from any warranty expressed or implied or any other failure of this product.

WHAT IS NOT COVERED BY THIS WARRANTY

Hoist's sole obligation under this warranty is limited to either repair or replacement of parts, subject to the additions below. This warranty neither assumes nor authorizes any person to assume obligations other than expressly covered by this warranty.

NO CONSEQUENTIAL DAMAGES. Hoist is not responsible for economic loss; profit loss; or special, indirect, or consequential damages.

WARRANTY IS NOT TRANSFERABLE. This warranty is not assignable and applies only in favor of the original purchaser/user to whom delivered. Any such assignment or transfer shall void the warranties herein made and shall void all warranties, expressed, implied or statutory, except the one (1) and five (5) year warranties described above. These warranties are exclusive and in lieu of all other warranties, including implied warranty and merchantability or fitness for a particular purpose. There are no warranties which extend beyond the description on the face hereof.

TRANSPORTATION COSTS. Hoist will accept parts covered under this warranty freight collect, provided that shipment has received prior approval. Hoist is not responsible for any other transportation costs, but will ship freight collect parts either repaired or replaced under these warranties.

Hoist Fitness Systems 9990 Empire St. #130 San Diego, CA. 92126 (800)548-5438

PLEASE KEEP THIS FOR YOUR RECORDS